
































: Вы можете сохранить выбранную станцию с помощью приложения .

## Two-way Radio


### Wired Connection

- ① Connect the two-way radio with the **CAST** using the **\*two-way radio cable** and port.

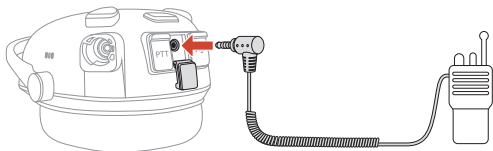

 - ② Press and hold the one of the **PTT Buttons** while talking.







### Push-To-Talk (PTT)



### Note:

**\*Two-way radio cable:** Sold separately. For more information, visit [senaindustrial.com](http://senaindustrial.com).

## Wireless Connection

- ①   →  "Configuration menu"
- ②   →  "Two-way radio pairing"

③ Enter the two-way radio's **Bluetooth Pairing** mode (refer to the User's Manual of the two-way radio you want to use).

④ Select **CAST** in the list of Bluetooth devices detected on the two-way radio.



⑤ Press and hold the one of the **PTT Buttons** while talking.

### Push-To-Talk (PTT)



 


## ■ Меню настроек


### Войти в меню настроек гарнитуры



### Навигация между элементами меню настроек





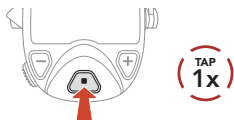






### Выполнить опцию меню




# Устранение неисправностей

## Возврат к заводским настройкам





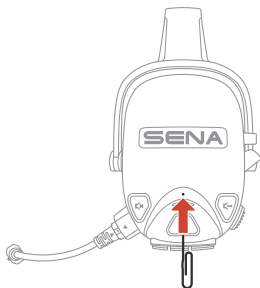


- ①   →  “Configuration menu”  
(Меню настроек)
- ②   →  “Factory reset”  
(Возврат к заводским настройкам)
- ③   →  “Headset reset, good-bye”  
(Сброс настроек гарнитуры, до свидания)



















## Перезагрузка системы














**Примечание:** Процедура перезагрузки не приводит к возврату к первоначальным заводским настройкам.

# ■ КРАТКИЙ СПРАВОЧНИК

ТИП	ДЕЙСТВИЕ	УПРАВЛЕНИЕ КНОПКАМИ
 Basic Operations	Power on/ Power off	     
	Volume up/Volume down	 or  
	Ambient mode on/off	 
 Mobile Phone	Answer phone call	 
	End phone call	 
	Reject phone call	 
	Call a Voice Assistant	 
	Speed dial	 

TYPE	OPERATION	BUTTON COMMANDS
 Music	Play/Pause music	 
	Track forward	 
	Track backward	 
 Mesh Intercom™	Mesh Intercom on/off	 
	Channel setting	 
	Mesh grouping	 
	Reset Mesh	 
	Enable/Disable Mic	 

TYPE	OPERATION	BUTTON COMMANDS
 FM Radio	FM radio on/off	 
	Select preset	 
	Seek forward/backward	 or  
	Scan up FM band/ Stop scanning	 
 Two-way Radio	Push-To-Talk (PTT)	